

Edging Restraint & Nails

Garden & Lawn Edging System For All Projects

Kedel's Border Edging is a fully recycled plastic edging restraint used to create clean and crisp separations between two or more landscaped areas. It is a lightweight, strong, weatherproof and easy to install edging product that can be used in a number of ways including on grassed areas, flower beds, driveways and patios. It is also incredibly flexible, so back supports can be snapped to bend the edging and meet the contours of any landscaped area. Plastic Nails are specially designed for Kedel's Border Edging and they fit perfectly into the holes of the edging's support structure. The nails are easy to secure using a mallet to push them into the ground below whilst holding the edging in place.

WHAT ELSE CAN WE HELP YOU WITH?

- LAWN & BORDER EDGING
- GROUND REINFORCEMENT & GRAVEL RETENTION GRIDS
- RECYCLED PLASTIC DECKING
- RECYCLED PLASTIC LUMBER
- SYNTHETIC WOOD
- LANDSCAPING PRODUCTS
- GARDEN FURNITURE
- FENCING GATES AND BARRIERS
- BUILDING AND CONSTRUCTION PRODUCTS
- PARK AND STREET FURNITURE
- AGRICULTURAL PRODUCTS
- INDUSTRIAL PRODUCTS
- MARINAS AND WATERWAY PRODUCTS
- SCHOOL AND COLLEGE FURNITURE
- RETAIL DISPLAY PRODUCTS




Scan QR code for more info

Kedel Limited are dedicated to providing our customers the most accurate details in order for them to make an informed decision on our range. However, there may occasionally be errors or omissions and we reserve the right to amend or remove specifications without notice.

kedeltrade.co.uk

sales@kedel.co.uk

+44 (0)1282 861325

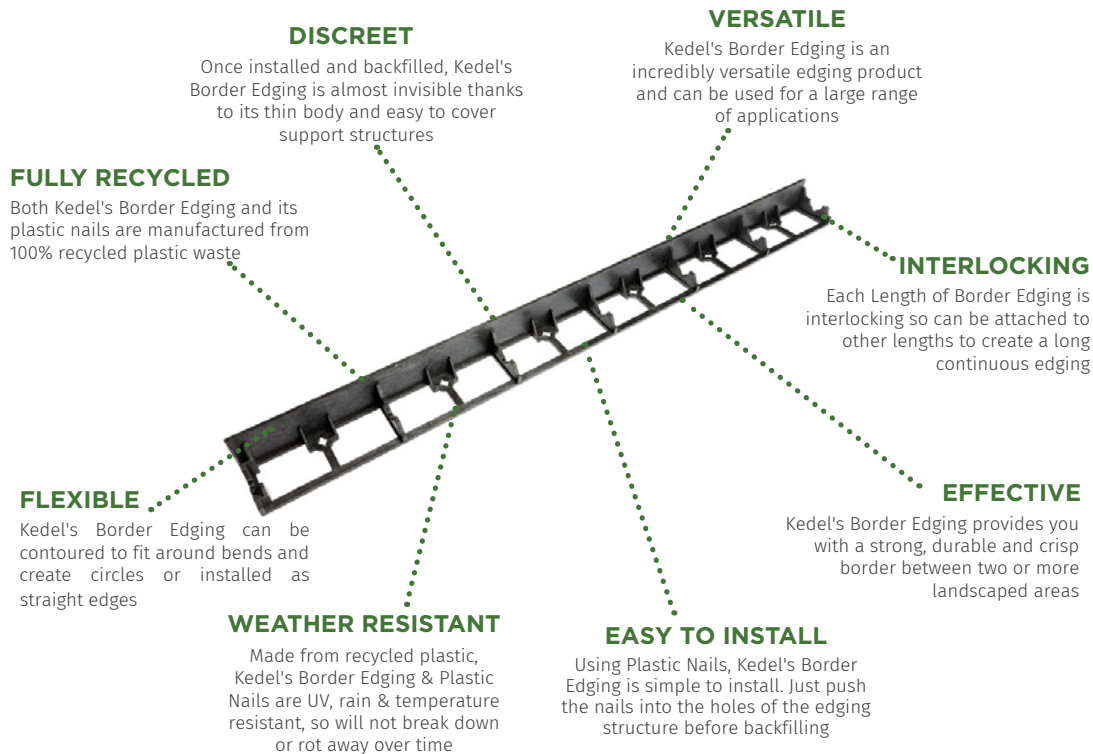

KEY FACTS


- » Kedel's Border Edging Length: **1 metre**
- » Width: **75mm**
- » Depth: **40mm**
- » Edging thickness: **5mm**
- » Material: **Recycled high-density polyethylene**
- » Interlocking: **Yes**
- » Plastic fixing peg length: **250mm**
- » Width: **17mm**
- » Depth: **30mm**
- » Material: **Recycled polypropylene**


APPLICATIONS

- GRASS**
Use around grassed areas to prevent crumbly soil edges and turf from overgrowing
- FLOWERBEDS**
Kedel's Border Edging keeps soil, plants & flowers contained whilst preventing material migration
- PATHWAYS**
Pathways are outlined and confined by installing Kedel's Border Edging down both sides of the path
- PATIOS**
Use Kedel's Border Edging around patios to separate and keep them secluded from surrounding areas
- DRIVEWAYS**
Used to help prevent material migration, Kedel's Border Edging is the ideal edging solution for driveways
- SEPARATION**
Keeps landscaped areas separated preventing material migration


Installation Instructions

1. Decide where your Border Edging is going to be installed before measuring, marking out and ensuring you have enough edging to complete the project.
2. Dig a small trench and lay Kedel's Border Edging into the trench, ensure that the edging is pushed up and sitting flush against the landscaped area you are wanting to keep contained or separated. Connect neighbouring pieces of edging together to create one long edging strip and lessen the chances of the edging moving once installed.
3. To manipulate Kedel's Border Edging and meet the shape of contoured areas, snip the back supports of the edging using sharp scissors or small shears. Snip as many supports as you need to allow the edging match the layout of the landscaped area.
4. Once in place, fix Kedel's Border Edging into the ground. Using Kedel's Plastic Nails, mallet them into the holes of the edging's support structure - the nails are specially designed for use with Kedel's Border Edging. Use 6 nails per linear metre to ensure the edging is properly secured.
5. Repeat this process until you have created the full border you wanted.
6. Finally, back fill the edging using soil, gravel, wood mulch or other appropriate materials to ensure the edging is secure and to hide the support structure and fixings.

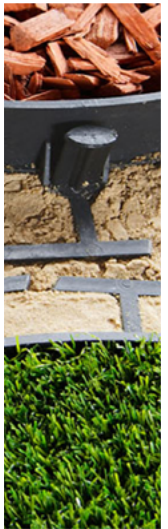

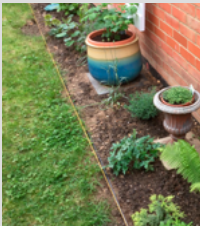



STEP 1
MEASURE THE AREA




STEP 2
DIG A TRENCH & LAY KEDEL'S BORDER EDGING INTO IT




STEP 3
SNIP & BEND EDGING IF REQUIRED




STEP 4
SECURE EDGING USING PLASTIC NAILS



STEP 5
REPEAT UNTIL ALL EDGING IS INSTALLED



STEP 6
BACKFILL AND COVER THE EDGING

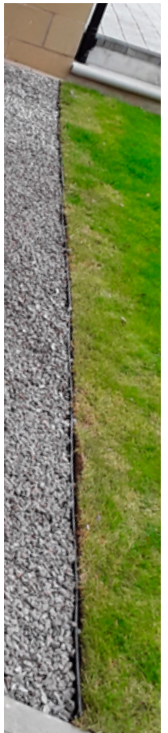


PRODUCT CODE	COLOUR	DESCRIPTION	THICKNESS (mm)	DIMENSIONS (mm)	PACK SIZE	PALLET QTY	UNIT WEIGHT (kg)
Geob4575-1000	Black	Border Edging - 1m	5	1000 x 75 x 4	1	900	0.38
Geob-N-010	Black	Border Plastic Nails	17	250 x 30	10	-	0.1